

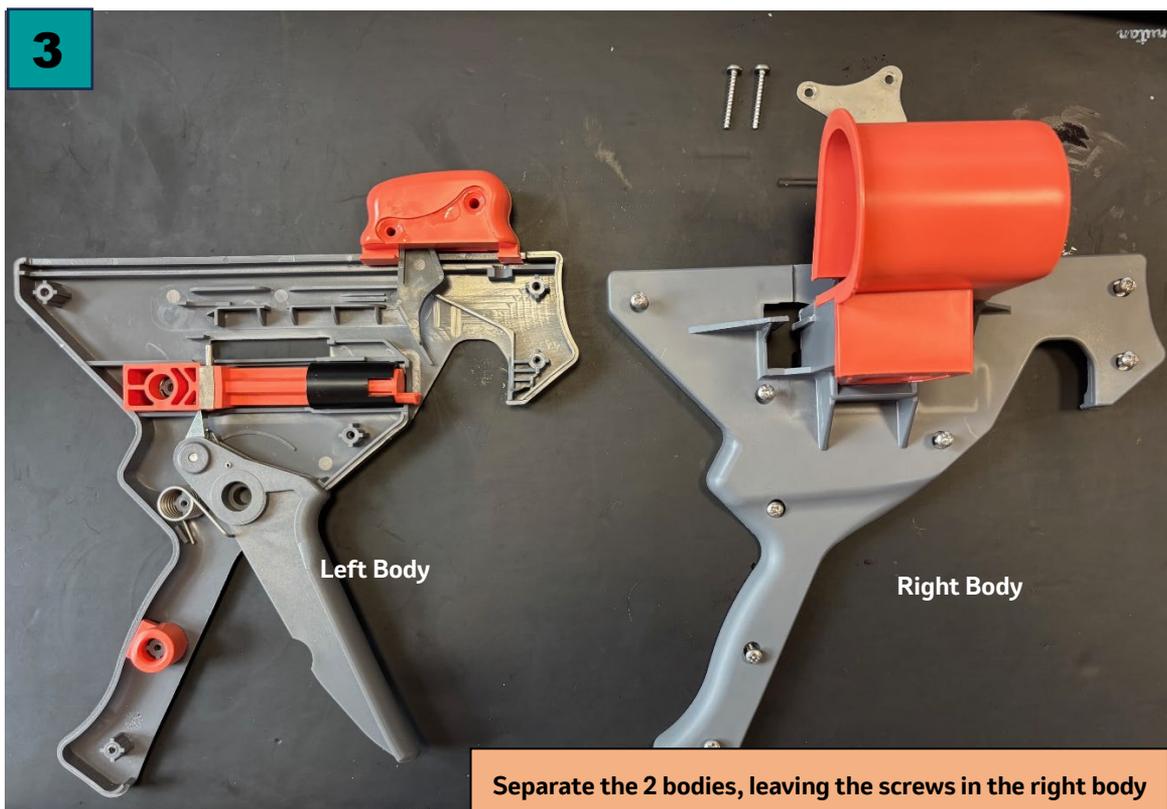


	INSTRUCTION	N° : ALB_PR_A6_INS_207 Rev : 1.0 Date : 15/05/2025 Auteur : T.BERLOU
	<b>RAPIDMATIC EVO</b> <i>Piston change instructions</i>	
METHODES INDUSTRIALISATION		


# **RapIDmatic Evo** **Piston change instructions**

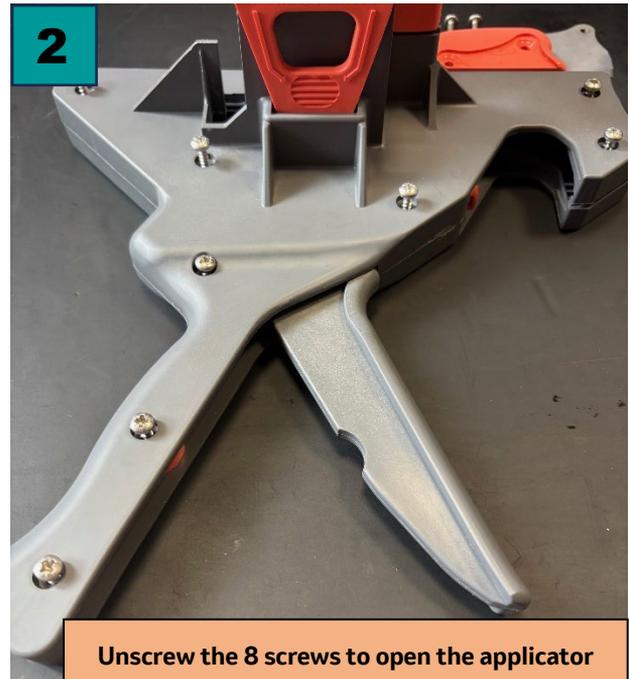

**RAPIDMATIC EVO**  
*Piston change instructions*

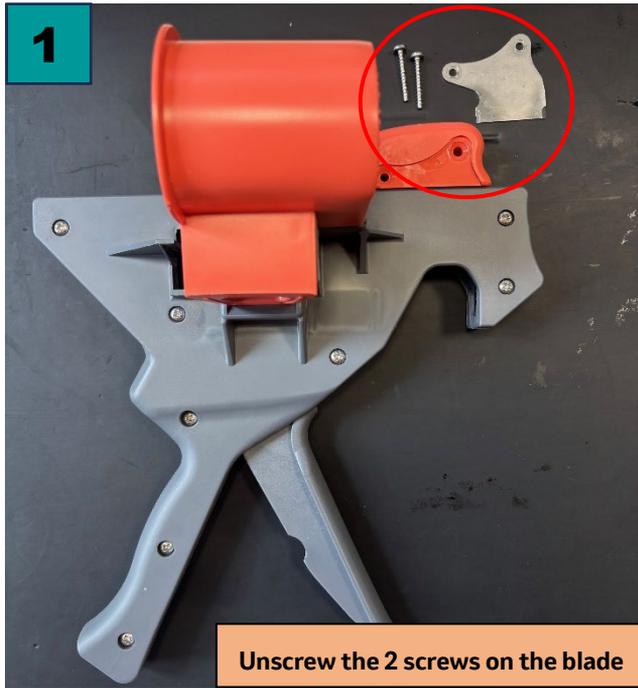


**RAPIDMATIC EVO**  
*Piston change instructions*

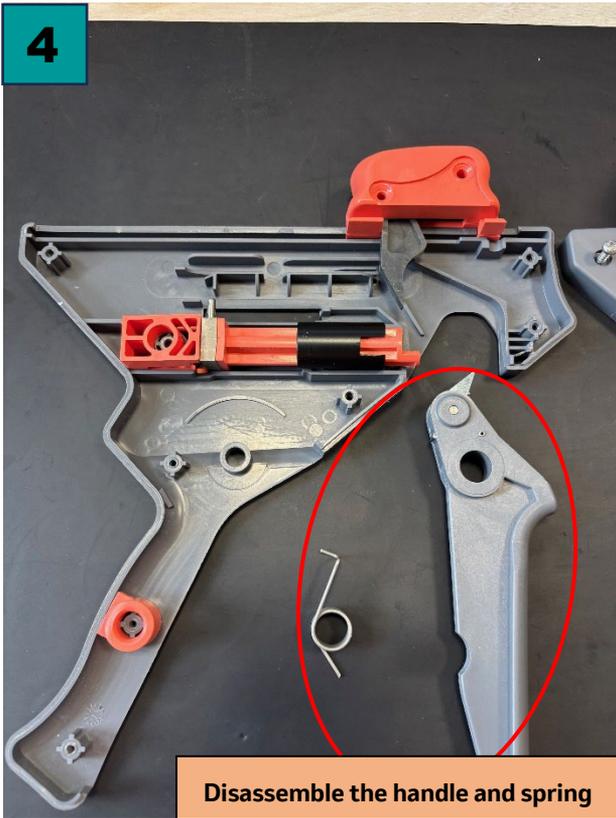


Fit the bearing onto the piston with **the flat part** against the body

Gauche

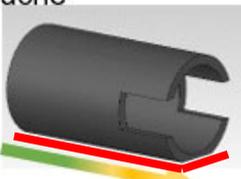

Droite

Refit the new piston into the bearing

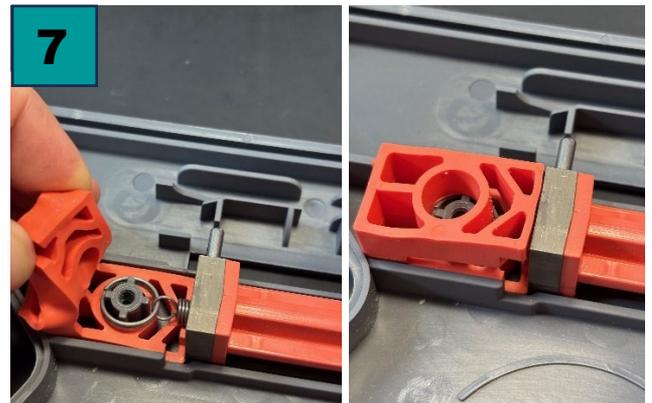


Position the spring in the shock absorber

**RAPIDMATIC EVO**  
*Piston change instructions*


**8**

Fit the bearing onto the piston with the **flat part** against the body

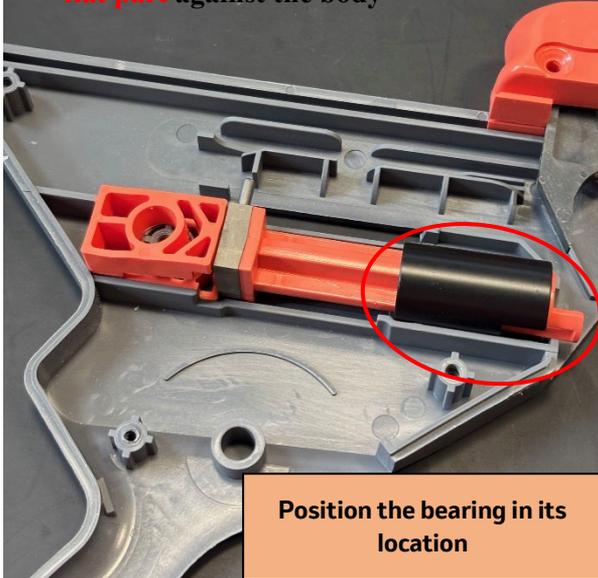

Position the bearing in its location

**9**

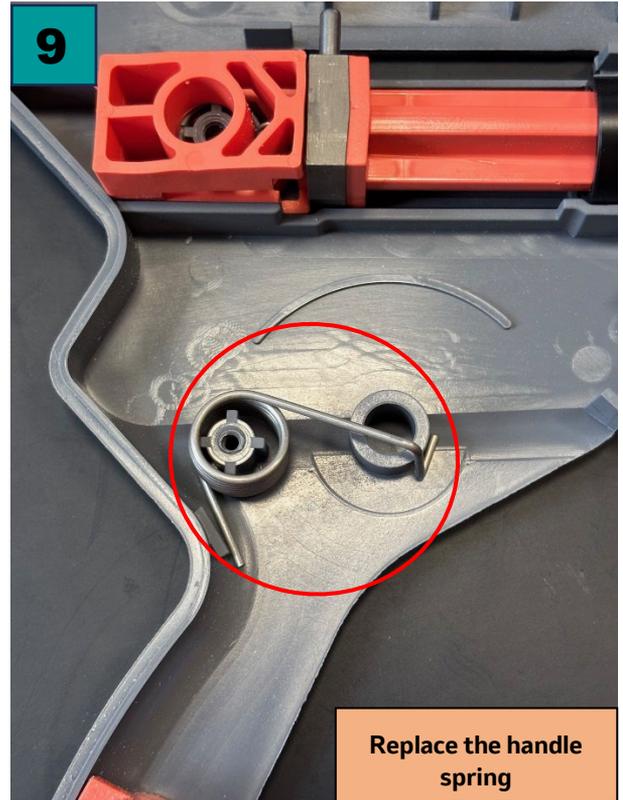

Replace the handle spring

**10**



Position the handle

**11**



Check the correct position of the spring

**RAPIDMATIC EVO**  
*Piston change instructions*

**12**




Check that the ball is in its location

**13**




Assemble the 2 bodies, making sure to insert the piston pin into the loader plate

**14**

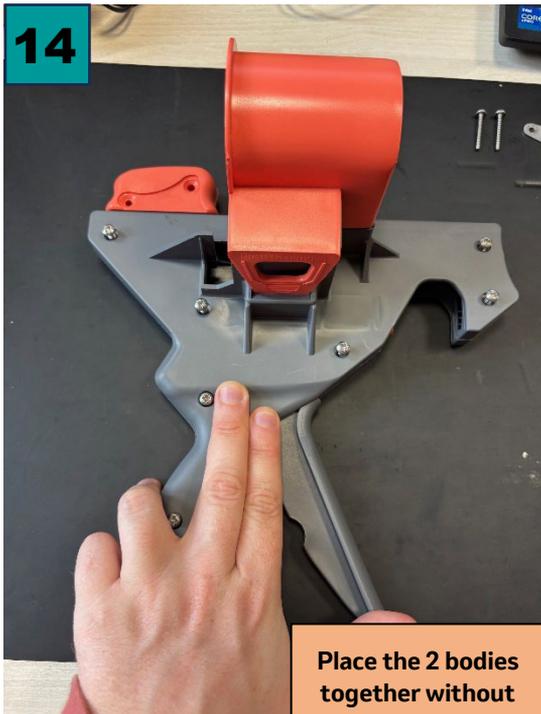

Place the 2 bodies together without

**15**

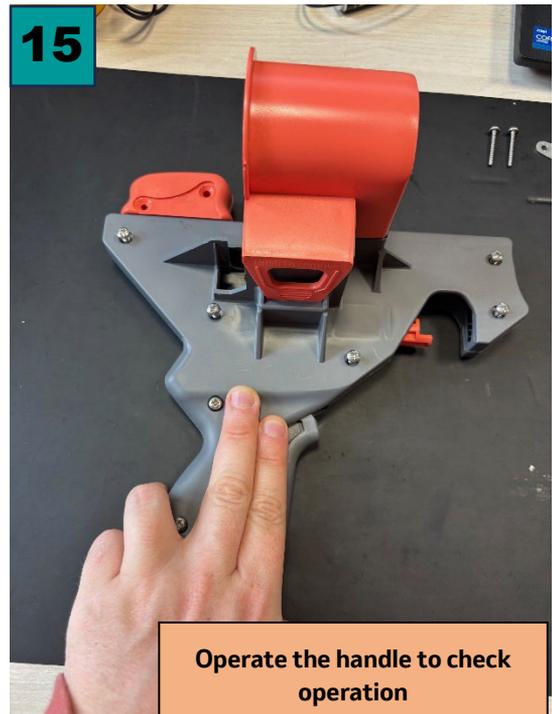

Operate the handle to check operation

**RAPIDMATIC EVO**  
*Piston change instructions*

